



Gebruikershandleiding Osprey Poco AG (ENGLISH)



WARNING FALL OR STRANGULATION HAZARD.

READ ALL INSTRUCTIONS BEFORE USING YOUR OSPREY POCO AG™ SERIES FRAME CHILD CARRIER.



MAXIMUM LOAD 22 KG / 48.5 LBS. (Child, gear and pack weight combined)



WARNING Do not use until the child can sit unaided.



WARNING Do not use carrier with a child weighing less than 7.25kg / 16 lbs. or more than 18 kg / 40 lbs.



WARNING Do not leave the child unattended in this carrier!



WARNING When the child is in the carrier, their head may be higher than the adult's head. Care should be taken to be aware of hazards; e.g., door frames, low branches of trees, etc.



WARNING Avoid serious injury from falling or sliding out. Always use child retention system.



WARNING Do not place on counter tops, tables, or other elevated surfaces.



WARNING When using the carrier the adult shall be aware of the following:


- + The Poco AG™ Series is designed only for one child to be carried by an adult.
- + Check the child carrier to assure all buckles, snaps, straps and adjustments are secure before each use.
- + Always inspect the child carrier prior to use for damage. Never use the child carrier with a bent frame. Never use with broken buckles anywhere on the pack. Never use with tearing, torn or ripped seams or fabric anywhere on the pack.

ASSEMBLY

1. POCO AG™ CHILD CARRIER SET-UP



- 1.1** Deploy the articulating footbar by pulling the footbar back until an audible click is heard.

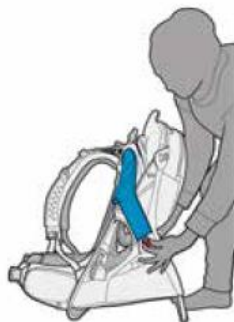

- 1.2** Your Poco AG™ may arrive in the stored position with the sidearms connected at the bottom of the side panel. To set up the carrier for use release the red male buckle of the sidearms from the lower grey female buckles.



- 1.3** Rotate the sidearms up and insert the red end of each sidearm into the red cuff located on both sides of the child's head rest.



- 1.4** Once the sidearms are resting in the cuffs, connect the red male buckle of the sidearms to the red female buckle of the cuffs. Your child carrier cockpit is now locked into the child carrying position.

To store and travel with your Poco AG™ reverse Steps 1.1–1.4 and store in the Poco AG™ Carry Case (sold separately).

2. FIT THE ADULT

⚠ WARNING Child must not be in the carrier during the adult fit process.

HIPBELT SIZING 26"-48" / 66cm-122cm
TORSO SIZING 15.5"-21.5" / 39.5cm-54.5cm (all Poco AG™ styles)


FIT THE HIPBELT



2.1 Loosen the harness, hipbelt and load lifter straps.




2.2 Put the pack on and place the hipbelt centered over the hipbones. Buckle and tighten the hipbelt.

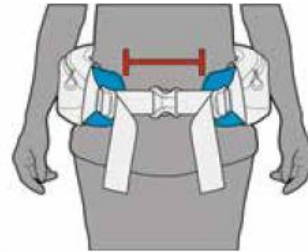

2.3 The ends of each hipbelt should be 3-6 inches / 8-15 centimeters from each other for a correct fit. Make adjustments to the sizing of the hipbelt utilizing the Fit-on-the-Fly™ hipbelt extensions to achieve proper fit.

TO ADJUST THE FIT-ON-THE-FLY™ HIPBELT, FOLLOW THESE STEPS:

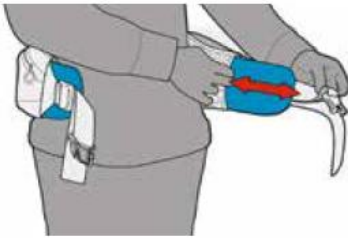


2.4 Release the extension wings by separating the hook and loop fabric closure between the interior hipbelt mesh and the extension wing. Slide the extension wings in or out to adjust the hipbelt position. Extend the wings the same distance on both sides using the size arrows for guidance to ensure the pack's weight is evenly distributed. Press firmly to reengage the hook and loop.

FIT THE BACKPANEL AND HARNESS




2.5 With the pack on and hipbelt fitted, tighten the shoulder harness straps by pulling them down and back.

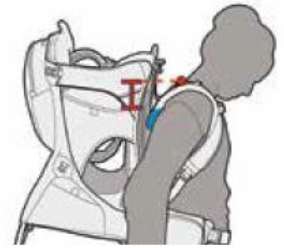


2.6 For proper torso fit, your C7 vertebra (bump at the base of your neck) should be located 1-2 inches / 2.5-5 centimeters above the top edge of the shoulder harness yoke.


TO ADJUST THE TORSO LENGTH, FOLLOW THESE STEPS:

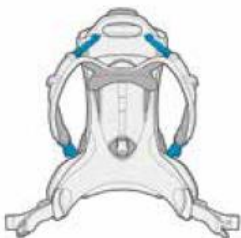

2.7 Take the pack off and completely loosen the pack's load lifters and harness straps.

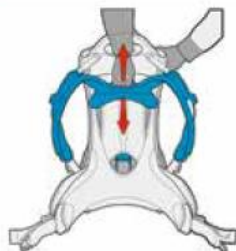

2.8 Locate the torso adjustment cam at the center of the backpanel and lift up to release. Slide the shoulder harness up or down to the correct torso length.

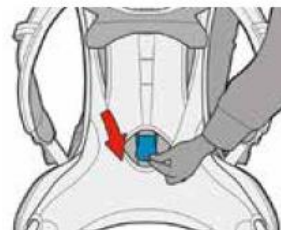


2.9 Push down the torso adjustment cam to lock it into position. Your child carrier is now fitted to the adult.

3. FIT AND SECURE THE CHILD

PREPARE THE CHILD COCKPIT BEFORE PLACING THE CHILD IN THE CARRIER



3.1 Release the Double Halo™ child harness by pressing the red button at the front of the cockpit.

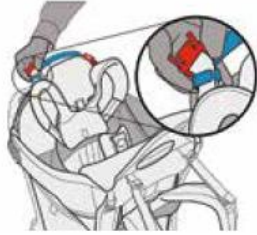


3.2 Slip both child harness straps into the plastic webbing keepers mounted on the rear handle. This keeps the harness straps out of the way to make it easier to place the child in the carrier.

ADJUST CHILD SEAT HEIGHT

To adjust the seat, follow these steps:




3.3 For proper fit, the child's chin should be level to the top of the drool pad at the front of the cockpit. Place the child in the carrier to check if adjustment is needed.

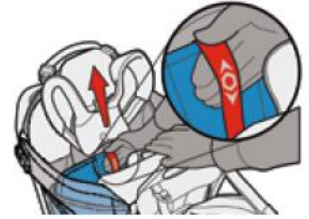

3.4 To move the seat up, grab the red handle at the back of the seat and pull up and the seat will automatically lock into position.

⚠ WARNING Child must not be in the carrier while adjusting seat height.

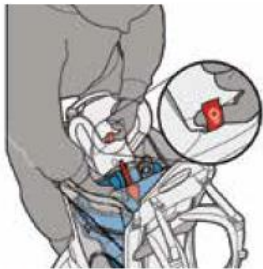

3.5 To move the seat down, pull up the red webbing loop up located at the base of the child's head rest and while holding the webbing loop up push the seat down to the desired position.


SECURE THE CHILD



3.6 Place child in the child carrier guiding one leg through each of the Double Halo™ leg loops in the child seat. Ensure the child's chin is level with the top of the drool pad for proper fit.



3.7 Unclip the child harness from the plastic webbing keepers mounted on the rear handle. Guide the child's arms through the Double Halo™ arm loops of the harness.

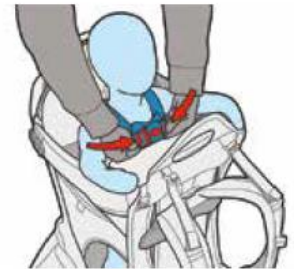


3.8 Insert the right and left harness male buckles into the dual sided female buckle located on the chest pad.



3.9 Cinch down both right and left straps so that the harness is snug around the child's upper torso. The child is now secure in the cockpit.

ADDITIONAL CHILD FITTING TIPS

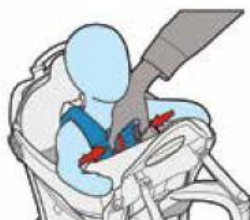


3.10 To loosen the child harness, pinch the buttons at the ends of the harness buckles and pull chest pad away from the child.



3.11 Use the stirrups for children at the top of the stated weight range requirements in this owner's manual. Place feet in stirrups and adjust the stirrup height so the child's knees are slightly bent to prevent circulation deprivation.

4. SAFELY PUT ON THE CHILD CARRIER

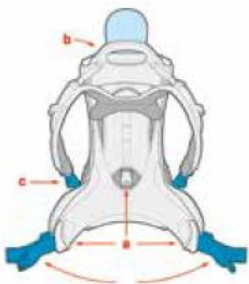

- 4.1** Before putting on the pack with child:
- a Ensure the adult torso and hipbelt are properly fitted on the adult. (Refer to Step 2)
 - b Ensure the child is properly fitted and secure within the child carrier. (Refer to Step 3)
 - c Loosen one side of the harness - keeping the side you intend to put on your shoulder first tight and fitted.
 - d Unbuckle and loosen the adult hipbelt and adult sternum strap.



- 4.2** Facing the adult backpanel and using both handles at the front and rear of the child cockpit, lift the child carrier and place the frame onto your slightly bent knee while in a standing position.



- 4.3** Let go of the handle behind the child's head rest, and with your free hand ensure the hipbelt is spread open.



- 4.4** Slip your free arm through the harness strap that is tight and fitted. Grab the shoulder strap and lift the carrier up onto one shoulder.



- 4.5** While you're still holding the shoulder strap, lean forward to stabilize the weight of the child and carrier on your back. Let go of the other handle in front of the cockpit. Slip this free arm through the shoulder harness and slide the carrier up onto both shoulders.



- 4.6** Buckle and tighten the hipbelt.



- 4.7** Tighten the shoulder harness straps.



- 4.8** Tighten the load lifter straps.



- 4.9** Buckle and tighten the sternum strap. You are now ready to use your Poco AG™ child carrier.

Additional Recommendation - Reach back and collapse footbar. This will allow a greater maneuverability around objects. It is very important you ensure the footbar is deployed and you hear the audible click before taking off the child carrier.

To take off the child carrier, ensure the footbar is deployed and you hear the audible click. Then reverse steps 4.1-4.9.

SUNSHADE


Included on all Poco AG™ models the built-in sunshade is easily stored and deployable from its own zippered pocket. It offers quick and easy UV protection for the child.




- 1** Unzip the sunshade pocket marked with woven label.



- 2** Grab the webbing loop on the top of the sunshade and pull the sunshade out of the pocket. Align the hook and loop at the base of the sunshade with the hook and loop at the top of the pocket. Press together to secure.

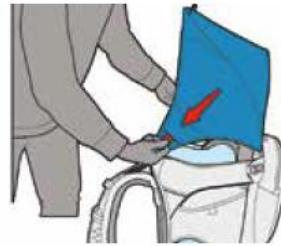


- 3** Securely grab the two red tabs and pull them forward.

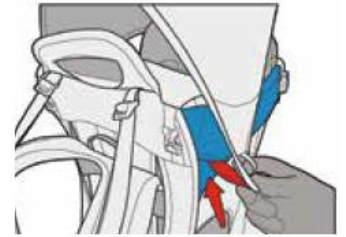

- 4** Insert the red tabs into the sleeves at the front of the sidearms to secure and tighten the sunshade. Your sunshade is now installed.

TO STORE YOUR BUILT-IN SUNSHADE, FOLLOW THESE STEPS:

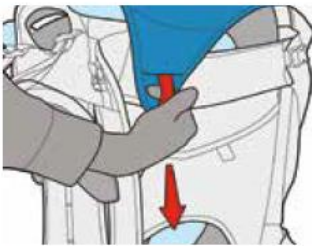

- 5** Place fingers in red webbing loops and pull red tabs out of their sleeves. Ensure to keep your fingers hooked into the red loops to prevent the sunshade from springing back at the child.




- 6** Separate the hook and loop at the base of the sunshade. Slide the sunshade down into the storage pocket and zip the storage pocket shut.


DROOL PAD

The drool pad at the front of the cockpit is soft to the touch and comfortably padded for the child. It can be removed for cleaning when necessary. Clean with warm water and mild detergent. Air dry in a well-ventilated area out of direct sunlight.

To remove and clean, follow these steps:

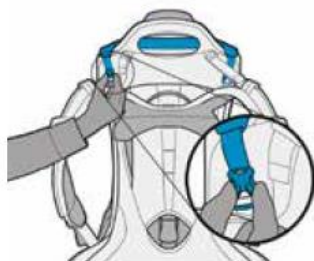

- 1** Unbuckle the upper drool pad buckles from the top of the backpanel.

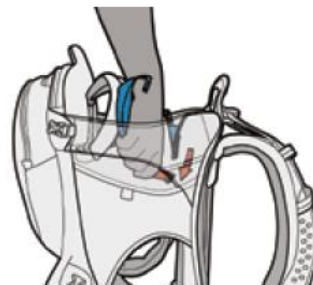

- 2** Pull down on the drool pad to release the hook and loop at the lower corners. To reinstall drool pad follow the above steps in the reverse order.